SETUP GUIDE

SPOWER BREEZER MACH 4)

I. SETUP

1. Mounting the fan head:




To set up your Power Breezer, you will need:


- · 2 people
- · An AC outlet
- Access to water to fill the water tank

Remember:


- Lift fan head only by the head handles.
- Never lift from the fan guards.
- The fan head weighs 86 lbs.

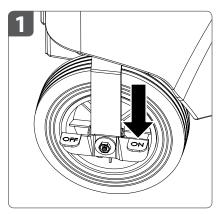


1a. Before you get started, be sure to lock both of the rear wheels by pressing down on the brake lever to set them to the ON position.

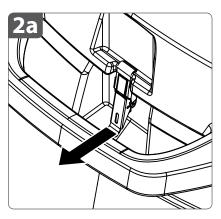

2a. Open the **lid latch** by first pulling forward the lower portion of the latch.

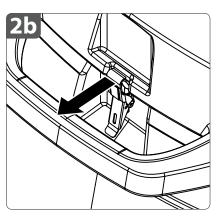


2b. Finish opening the **lid latch** by pulling the upper portion of the latch forward and away from the lid.

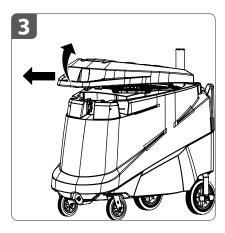

3. Remove **tank lid** by first lifting up on the **transport handle** and then pulling forward.



4. Tilt up the four **fan head handles**, if they are folded down, prior to lifting the head.

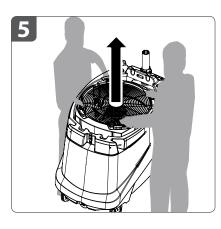


- **5a.** To lift the **fan head** out of the **water tank**, each person should stand on opposite sides of Power Breezer.
- **5b.** Both people should grasp the **fan head** by the **fan head handles**, as shown.

Remember:


- Lift fan head only by the head handles.
- Never lift from the fan guards.




6a. Lift the fan head straight up and out of the water tank. Carefully rest it on the edge of the water tank opposite of the fan head support pole, as shown.

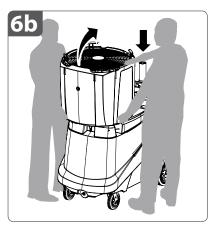

6b. Both people should re-adjust their grip so that they have one hand on a **fan head handle** or the black outer housing and one hand on the front edge of the **fan head,** as shown.

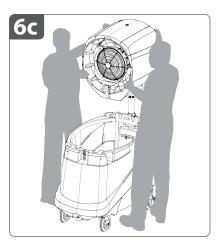

6c. Once again, lift the fan head and align it with the fan head support pole. Once the fan head is seated on the support pole, rotate the fan head horizontally until you feel it engage with the support pole.

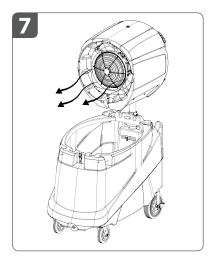


Once installed, the **atomizer** (metal disk) will be facing the **water tank**, air will be blown *over* the **water tank** when the Power Breezer is turned on.

2. Using the correct outlet:


Electrical current of 110v or 220v is required.

For safety, only plug your Power Breezer into an outlet equipped with GFCI. **DO NOT plug into standard outlet without a GFCI feature.**

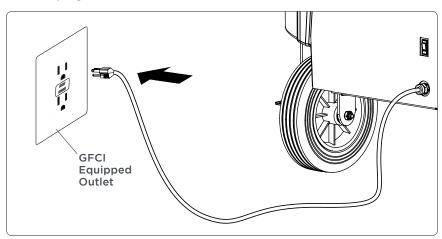

NOTE: A live power outlet can be verified when the Power Breezer is **plugged in and powered off** by pressing the **oscillation** or **water buttons.** The LED lights will dimly illuminate when either of these buttons are depressed.


3. Adding water to the water tank:

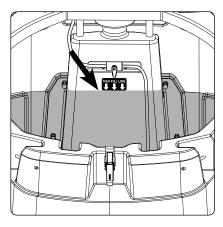


Do not fill the water tank above the max fill level, as shown. If water tank is filled past this level, water may leak out of the water tank and cause a hazard around the Power Breezer.

The water valve can be adjusted for optimal performance according to your climate. To adjust, please follow the steps in the **Operation** - **Adjusting the misting level** section of this manual.

4. Routing power and water lines and replacing tank lid:

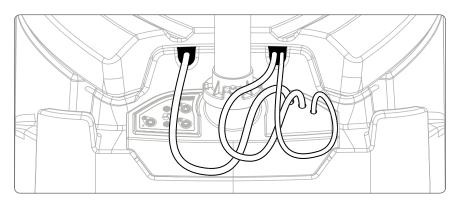

4a. Route the fan **head power cord, atomizer drain hose, and water inlet hose** through the openings in the back of the **water tank** as shown above.

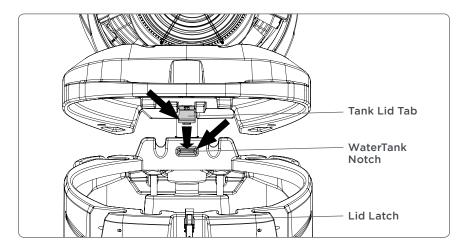


Note the tank lid tab on the back underside of the tank lid.

- **4b.** Slide the **lid tab** into the corresponding **water tank notch** in the back of the **water tank** as shown above.
- **4c.** Lower the front of the **tank lid** onto the **water tank** and re-lock **lid latch.**

II. OPERATION

1. Control panel – Buttons:

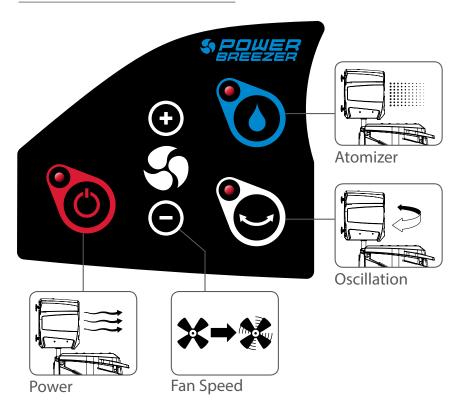


2. Turning on your Power Breezer:


- 2a. Press the power button and hold for one second.

 The LED light for the power button will be lit and the fan blades will begin to slowly rotate to indicate the Power Breezer is powered on.
- **2b.** Press the **fan speed button** to increase the fan speed. Adjust the fan speed by pressing the or buttons.
- **2c.** Press the **oscillation button** once to activate the oscillation feature.
- **2d.** Press the **atomizer button** once to activate the misting feature.

3. Adjusting the misting level:

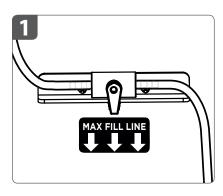


- **1a.** Press the **power button** and **hold for one second** if Power Breezer is not already on.
- **1b.** Set **fan speed** to desired level.
- **1c.** Locate the **water valve.**The **water valve** is inside the **water tank** towards the rear.
- **1d.** Start with the **water valve** closed, at the 6 o'clock position as shown.
- **1e.** Start the atomizer by pressing the **atomizer button** once.

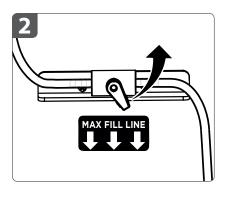

- **2a.** Open the **water valve** slightly by turning the lever counterclockwise. There will be a short delay before misting begins. Check the distance of the mist.
- **2b.** If there is a strong mist at 6 feet away, then the moisture setting is too high for conditions.

To reduce misting, rotate the **water valve** lever clock-wise back towards the 6 o'clock position.

Optimal moisture settings can also be adjusted according to personal preference.

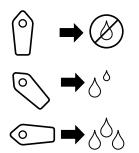

CONTACT INFORMATION

General Information or Product/Installation Support

Email: customerservice@breezercooling.com

Phone: 844.233.5673

Visit: PowerBreezer.com/support

For Sales Information

sales@breezercooling.com

Phone: 844.233.5673

User Videos

Follow Us

www.youtube.com/powerbreezer www.powerbreezer.com

www.facebook.com/PowerBreezer

www.twitter.com/PowerBreezer



PowerBreezer.com

6413 Congress Avenue, Suite 110 Boca Raton FL 33487

©2020 Breezer Holdings, LLC. All Rights Reserved.

Power Breezer® is licensed under U.S. Patent No. 6,789,787.

