BREEZEOASYS™



USER MANUAL

This manual covers
the following models:

AB10-A-00-G	ABT10-A-00-G
AB10-A-00-B	ABT10-A-00-B
AB20-A-00-G	ABT20-A-00-G
AB20-A-00-B	ABT20-A-00-B

Firmware v3.4

The Breezer Oasys

The Breezer Oasys is an outdoor cooling device engineered to create luxuriously cool environments outdoors. To get the most out of your Breezer Oasys, become familiar with its features and functions as described in this manual.

SAVE THIS MANUAL

CONTENTS

The Breezer Oasys	2
Warnings	3
Breezer Oasys Overview	4
Breezer Oasys Reservoir	6
Breezer Oasys Operation	8
Maintenance	11
Troubleshooting	13
Helpful Tips	14

Warnings

- This unit is intended for use only as specified in this manual. If you have questions about its use, please contact Breezer Mobile Cooling.

  1-844-233-5673
  customerservice@breezercooling.com
- Use only on a circuit protected by a ground-fault circuit-interrupter (GFCI).
- Avoid using extension cords
- Do not allow plug to become wet. Do not plug in while hands are wet. Doing so causes risk of electric shock.
- Do not alter the plug in any way.
- If the power cord is damaged, do not attempt to repair it yourself. Contact Breezer Mobile Cooling customer service for assistance.

  1-844-233-5673
  customerservice@breezercooling.com
- Turn off and unplug the unit prior to filling or emptying water reservoir.
- Turn off and unplug the unit prior to moving.
- Turn off and unplug the unit prior to cleaning it.
- Always unplug the unit by pulling on the plug and never on the cord.
- Do not insert fingers or other objects inside the fan head, doing so may cause bodily injury.
- Children can fall into open water reservoir and drown, even in a small amount of water. Keep children away from reservoir. Keep reservoir lid on at all times.
- Closely supervise nearby children and pets when using this unit. Do not leave unit unattended.
- Children shall not play with the unit.
- Cleaning and user maintenance shall not be made by children without supervision.
- The unit is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- This unit can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.
- When operating unit, use common sense. Stay clear of moving parts and only use water that is safe for drinking.
- If the unit becomes damaged or malfunctions, do not attempt to repair the unit. Doing so will void the warranty. Contact Breezer Mobile Cooling customer service for repair assistance.


  1-844-233-5673
  customerservice@breezercooling.com
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction" or equivalent.
- This unit is suitable for use as a fan for tropical climates.
- This unit is suitable for use outdoors.
- Do not throw away this user manual, keep it for reference.

Breezer Oasys Overview

FRONT



REAR

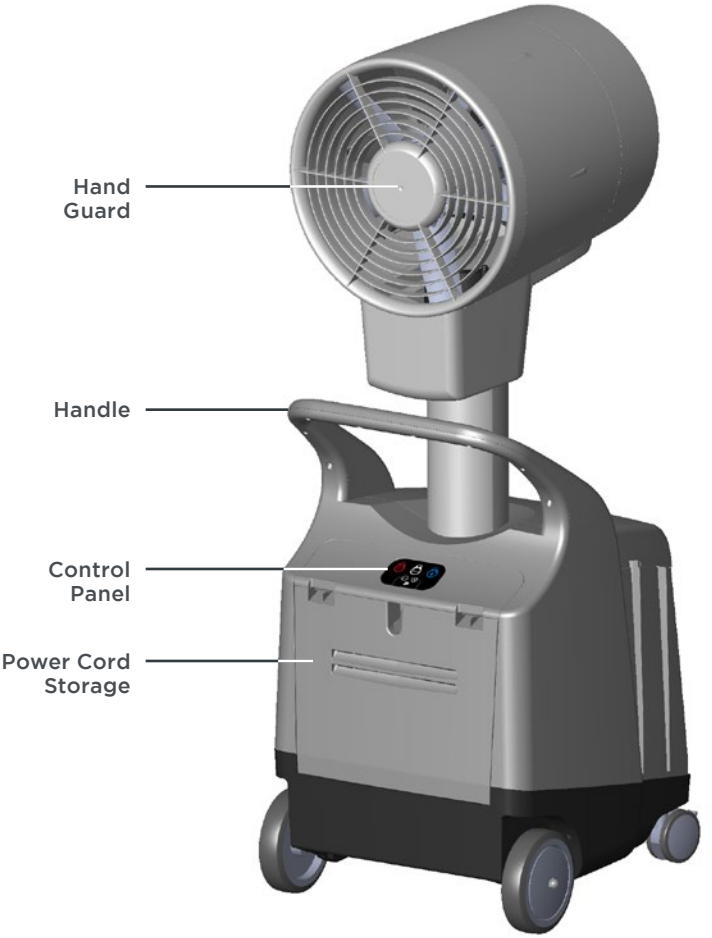


Breezer Oasys Reservoir


Filling the reservoir

Your Breezer Oasys' reservoir holds up to 19 gallons of water which can cool for up to 18 hours of use. When filling your Breezer Oasys' reservoir, be careful not to fill it past the max fill line.


1. Open reservoir. Hold reservoir cover from slots on the sides and pull up and towards you with both hands. Set reservoir cover aside.

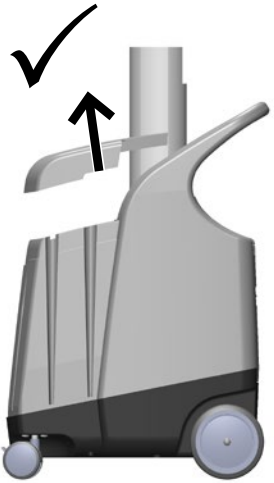

Note: Do not lift reservoir cover from the front. Doing so may damage the cover.

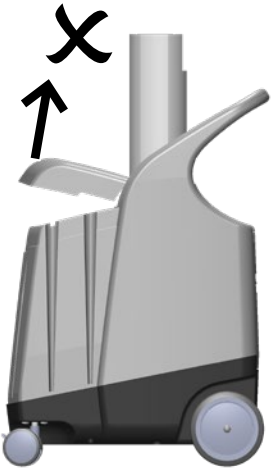

2. Prior to filling the reservoir, ensure that the drain plug is securely seating in the drain hole.

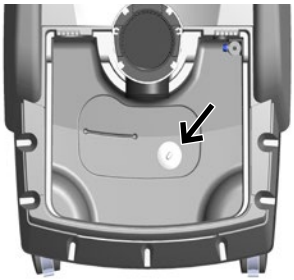

3. Fill reservoir to desired level, do not fill past the max fill line. If the reservoir is filled past the max fill line, water may leak out.



4. The water valve output may be adjusted for optimal comfort according to climate.
5. Once the reservoir has been filled to desired level and water valve output has been adjusted, place reservoir cover back on the reservoir. Gently tap reservoir cover back in place.

Draining the reservoir

Depending on volume of water to be drained, you may want to move your Breezer Oasys to a suitable location prior to draining.


1. To drain the reservoir, remove reservoir cover. Reach into the reservoir and pull the drain plug.



2. We recommend draining the reservoir and wiping down reservoir at least once a week to ensure water is fresh and reservoir remains clean.

Breezer Oasys Operation

BREEZER OASYS CONTROL PANEL

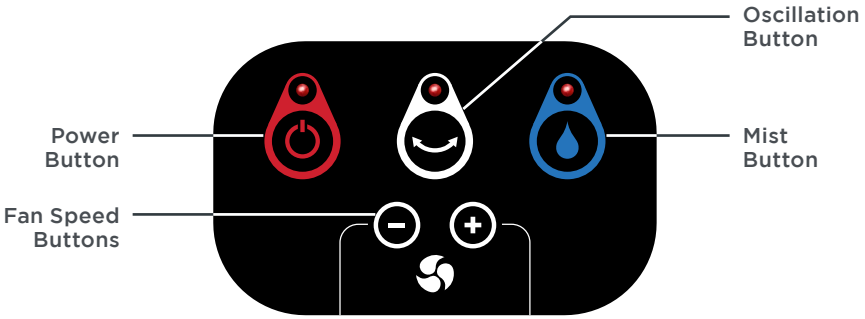

Turning ON Your Breezer Oasys:

1. Press the power button and hold for one second. The LED light for the power button will be lit and the fan blades will begin to slowly rotate to indicate the unit is powered on.
2. Press the fan speed button to increase the fan speed. Adjust the fan speed by pressing the or buttons.
3. Press the oscillation button once to activate the oscillation feature.
4. Press the atomizer button once to activate the misting feature.

Turning OFF your Breezer Oasys:

1. Press the power button and hold for one second.
2. The power button's light will blink as the unit turns off.
3. Your Breezer Oasys will memorize your settings until the next time it is turned on.

Adjusting the Fan Settings:

The Breezer Oasys offers variable fan speed for optimal comfort. Adjust the fan speed to your comfort and according to how large an area you would like to cool.

1. Push the and buttons on the control panel to adjust the fan speed.
2. Your Breezer Oasys will memorize these settings when turned off, unless it is unplugged.

Oscillation:

To cool a wide area, use your Breezer Oasys' oscillation feature. This feature can also be used to point the fan head towards a different location without moving the entire unit.

1. Push the Oscillation button on the control panel to turn the oscillation feature on and off. When turned on, the oscillation button's LED light will be lit.
2. When the oscillation is turned off, the fan head will stop rotating at its current location. Your Breezer Oasys will remember your settings until the next time it is turned on, unless it is unplugged.


Misting Feature:

The misting feature may be turned on and off so that your Breezer Oasys may be used as a misting fan.

1. Ensure your Breezer Oasys has water in the reservoir tank.
2. Push the Mist button on the control panel once to turn the mist feature on. The mist button's LED light will turn on.
3. Wait a few seconds to allow the water flow to travel to the fan head.
4. To turn the mist feature off, press the mist button again.

Adjusting Mist Settings:

The mist setting is controlled by the **water valve output located inside the reservoir tank.** Your Breezer Oasys will be shipped with the water valve output pre-set at a low setting.

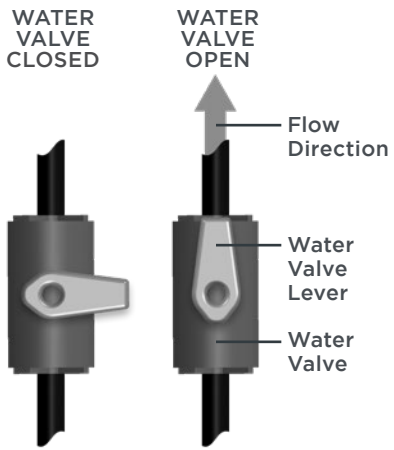

To **increase mist produced** turn the water valve output lever counter clockwise.

To **decrease mist produced** turn the water valve output lever clockwise.

Adjusting Your Breezer Oasys for Your Environment:

The optimal setting will vary depending on your climate. Dryer climates will require a higher water valve output while humid climates will require a lower water valve output. The mist setting will be optimal when you can stand about 6 feet from your Breezer Oasys and not fog up your sunglasses.

Follow the instructions outlined below to change the water valve output to optimize the mist setting for your climate:

1. Turn the Breezer Oasys on and let it run for 10 seconds to allow the water flow to start.
2. After 10 seconds, start the atomizer. Do not turn the oscillation on.
   a. If there is a strong mist at 6 feet away such that your glasses are getting fogged, then the moisture setting is too high for conditions.

To decrease misting, turn the water valve clockwise and back towards the 3 o'clock position.



b. If there is not enough mist, the water valve output is not open enough. Turn the water valve counter clockwise by a few degrees until the cooling and misting are ideal.



Control panel – Locking feature:

When the locking feature is activated only the power button will function, all other features will be locked.

1. To activate the locking feature hold down the fan speed ⊖ and ⊕ buttons for 5 seconds until the LED lights begin to blink.
2. The locking feature is now activated, the lights will continue to blink to indicate that the locking feature is on.
3. This will lock: oscillation, atomizer, and fan speed. Power button ⏻ will still function.
4. To unlock the controls, hold down the fan speed ⊖ and ⊕ buttons for 5 seconds until the LED lights stop blinking.

Control panel – Memory feature:

The Breezer Oasys control panel is equipped with a memory feature. When it is powered off it will remember the settings of its last use.

When powered back on, it will resume the same oscillation, atomizer, and fan speed settings of its last use.

Control panel – Dim/Brighten LED lights:

The Power Breezer is equipped with a feature to dim/brighten the control panel's LED lights:

To **dim/brighten** the control panel LED lights:

1. Press and hold the atomizer button 💧 for one second then release.
2. The atomizer button's 💧 LED light will blink indicating you have initiated the dim/brightening feature.
3. **To dim,** repeatedly press the ⊖ fan speed button until the LED lights are dimmed to the desired level.

NOTE: The dimming feature's lowest level will turn off the LED lights.

1. **To brighten,** repeatedly press the ⊕ fan speed button until the LED lights are brightened to the desired level.
2. Press atomizer button 💧 once to exit dim/brightening feature. Current settings are set and saved.

Maintenance

The Breezer Oasys was designed with easy maintenance in mind. Below are a few steps to follow to keep your Breezer Oasys performing at its best.


Cleaning the water pump:

It is important to occasionally clean the water pump to maintain its proper function and to avoid damage.

1. Gently pull front cover off to remove it.



2. Remove locking ring by turning it counter clockwise.

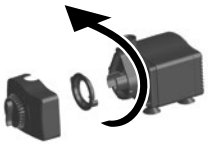

3. Gently pull impeller assembly to remove it.




4. Clean parts and pump with soap and water.




5. Reassemble water pump.



6. Gently pull back cover off to remove it.



Clean sensors with a brush and water, use a mild soap if necessary.

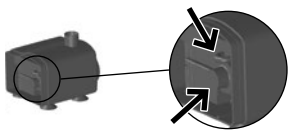

7. Reassemble water pump.



Cleaning the water system:

For optimal performance of the water system, we recommend the following maintenance be performed monthly.

WARNING: Once the cleaning process is started, it must be run through all steps including rinse to avoid atomizing the cleaning solution and blowing it out of the unit.

1. Following de calcification product manufacturer's safety guidelines, fill a bucket with a calcium and lime remover diluted with water following the de calcification product manufacturer's recommendation. Fill the bucket deeply enough to completely submerge the water pump.
2. Place the bucket in the tank, and place the water pump into the bucket/mixture. Position the drain tube so that it drains into the bucket as well.
3. Ensure the atomizer water valve is fully open, in line with the tubing.
4. **Power on** the unit.
5. Press the **atomizer and oscillation buttons** at the same time and hold them for 5 seconds. This will immediately enter the cleaning mode and water should start circulating but the fan, atomizer and oscillation will remain OFF. The LED lights for the atomizer and oscillation will be ON, indicating cleaning mode.
6. Allow the cleaning mode to run for about 15 minutes.
7. **Power off** the unit.
8. Dispose of the diluted calcium and lime remover solution following de calcification product manufacturer's recommendation. Replace the cleaning mixture with clean water and repeat steps 2 through 6 above to flush the system with clean water.

WARNING: Failure to flush the system with clean water will result in some cleaning solution being atomized and blown out of the unit while in use.

9. **IMPORTANT:** After completing the rinse and powering off the unit, **UNPLUG the unit and wait 10 seconds. This is the ONLY way to exit the cleaning mode.**

WARNING: If you encounter a unit in cleaning mode, flush with clean water (return to step 7) prior using the system.

Caring for the reservoir:

1. Once a week drain the reservoir and allow for it to dry overnight.
2. If the inside of the reservoir becomes slippery or slimy to the touch, drain the reservoir and clean it with mild soapy water. *Do not use bleach, chemicals or harsh detergents.* Rinse well with a hose and drain. Allow reservoir to fully air dry before storing.

Storing your Breezer Oasys:


1. During daily use, you may store your Breezer Oasys outside. We recommend storing it in the shade or in a protected area.
2. For long term storage, ensure the reservoir is fully dry and cover your Breezer Oasys to protect it from dust. We recommend purchasing a Breezer Oasys Waterproof Cover.

Caring for the exterior:

1. Occasionally wipe the exterior with a cloth moistened with water.
2. For cleaning dirt use only mild soapy water. *Do not use bleach, chemicals or harsh detergents.*

Troubleshooting

Before contacting the Customer Care Center, please locate your Breezer Oasys' serial number inside the reservoir and have it ready.

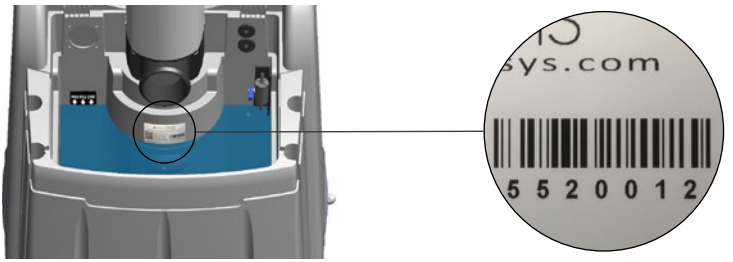

Atomizing disk is spinning, but there is no mist:

1. Verify that there is water in the reservoir.
2. Verify that the water pump is running. Water pump should vibrate when running.
3. If water pump is running but there is no water flowing, check that the water valve output is open and that the water valve output is open enough for your climate (See page 9).
4. Clean water pump. See *cleaning the water pump* (Page 11).
5. If the above steps fail, the water pump may need to be replaced. Please contact our customer care center at: **customerservice@breezercooling.com or 844-233-5673.**

Your Breezer Oasys shuts off:

1. Unplug your Breezer Oasys.
2. Wait 10 seconds, then plug it back in.
3. Restart your Breezer Oasys.

Your Breezer Oasys will not roll when pushed:

1. Ensure wheel brakes are in the OFF position.

Misting output is too high and droplets are creating excessive moisture:

1. Reduce mist output setting. See *adjusting your Breezer Oasys for your environment* (Page 9).

Unit is plugged in, and powered on, but the LED lights are off:

1. The LED lights dimming feature may have been activated. The LED lights may have to be brightened (See Page 10).

Helpful Tips

1. Do not store water in reservoir for long periods of time. Keep the water in your Breezer Oasys fresh. If you fill your reservoir but do not use it within a week, drain the reservoir, rinse it, and refill it with fresh water.
2. Your Breezer Oasys is designed for daily outdoor use. When used regularly, you may store your Breezer Oasys outdoors. We recommend placing it under a covered area. During periods of long storage, storing your Breezer Oasys indoors and under cover is preferred.
3. *Do not use bleach, chemicals or harsh detergents* for cleaning, this may damage your Breezer Oasys.
4. Your Breezer Oasys has the power to cool 1,500 square feet. Use the oscillation feature to cool a wide area.
5. Your Breezer Oasys is designed to create cool comfortable environments using water to cool down air, but never get you wet. To set your Breezer Oasys's mist to the perfect setting, see *adjusting your Breezer Oasys for your environment* section of this manual. To enjoy the most comfortable environment provided by your Breezer Oasys, observe the following placement guidelines:
   a. In moist climates, place your Breezer Oasys about six feet from entertainment areas for optimal performance. (High Humidity)
   b. In dryer climates, your Breezer Oasys may be placed four feet from entertainment area for optimal performance. (Low Humidity)
6. Your Breezer Oasys was specially designed to cool outdoor and partially covered spaces. It was engineered to cool well ventilated areas. We do not recommend using the Breezer Oasys to cool indoor spaces. Doing so may cause excess moisture buildup in the indoor space.
7. Do not attempt to repair your Breezer Oasys yourself, doing so will void the warranty.

WARRANTY

For one (1) year from date of shipment to the first purchaser, Breezer Holdings LLC ("Manufacturer") warrants the fan, fan blades, fan motor, air straighteners, and pump of the Breezer® Oasys unit to be free from defects in materials and/or workmanship. Those components found, upon examination by factory-authorized personnel, to be defective in material and/or workmanship will be repaired or replaced with new or remanufactured parts at Manufacturer's or authorized dealer's option and without charge. All other Breezer® Oasys components have a ninety day (90 day) warranty from the shipment date against defects in materials and/or workmanship. Transportation charges on parts submitted for replacement or repair under this warranty shall be borne by the purchaser. Unless specifically authorized in writing by an authorized representative of Manufacturer, any and all repairs and replacements must be performed by Manufacturer or an authorized Breezer® Oasys dealer or representative. Warranty claims must be made as soon as reasonably possible after a defect is discovered, but before the end of the warranty coverage period on the particular part. When a warranty repair or replacement is needed, the Breezer® Oasys must be brought to the Manufacturer's or authorized dealer's place of business during normal business hours. A reasonable time must be allowed for the performance of repairs or replacements.

THESE EXPRESS WARRANTIES ARE THE ONLY WARRANTIES BY MANUFACTURER ON THE BREEZER® OASYS. THESE WARRANTIES ARE LIMITED IN DURATION TO THE TIME PERIOD(S) OF THESE WRITTEN WARRANTIES. THESE WARRANTIES ARE IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES OR WARRANTIES, WHETHER EXPRESS OR IMPLIED. THESE WARRANTIES DO NOT COVER:

1. NORMAL DETERIORATION OR FADING OF COLOR, COSMETIC OR APPEARANCE ITEMS;
2. DAMAGE OR MALFUNCTION DUE TO IMPROPER REPAIR DUE TO ANY UNAUTHORIZED ALTERATION OR MODIFICATION MADE TO THE BREEZER® OASYS;
3. DAMAGE OR MALFUNCTION DUE TO ABUSE, NEGLECT, ACCIDENT OR FIRE;
4. DAMAGE CAUSED BY A NON-COVERED, UNAUTHORIZED PART;
5. FAILURE TO FOLLOW MANUFACTURER'S CLEANING AND MAINTENANCE GUIDELINES;
6. USE OF CIVILIAN/INDUSTRIAL MODELS IN MILITARY APPLICATIONS OR ON/AT MILITARY INSTALLATIONS; AND
7. SCRATCHES OR DENTS TO THE OUTER SURFACE/SKIN ARE NOT COVERED.

MANUFACTURER AND ITS AUTHORIZED DEALERS AND DISTRIBUTORS SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE BREEZER® OASYS, FOR ANY ALTERNATE EQUIPMENT, FOR ANY DAMAGE TO GOODS, COMMERCIAL LOSS, LOSS OF TIME OR INCONVENIENCE, OR FOR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

For more information, please go to **www.breezeroasys.com.**

CUSTOMER / TECHNICAL SUPPORT

Phone: 844-233-5673

customerservice@breezercooling.com

www.BreezerOasys.com

SOCIAL MEDIA

Follow us and share your Breezer Oasys pictures on Social Media

#BreezerOasys

Facebook: facebook.com/BreezerOasys

Twitter: twitter.com/BreezerOasys

Instagram: @breezeroasys

Houzz: http://www.houzz.com/pro/breezeroasys/breezer-oasys



BREEZER OASYS™

550 SW 12th Avenue, Suite 550, Deerfield Beach, Florida, 33442

©2016 Breezer Holdings, LLC. All Rights Reserved.
Breezer® is licensed under U.S. Patent No. 6,789,787.

Designed & Assembled in the USA