



SCOPE

This guide provides proper written instructions to ensure proper installation of Hair Guards for all Power Breezer mobile units.

REVISION HISTORY			
Rev. No.	Date	Author	Comment
1	8-9-2021	Lance Sperrring	Original Document
2	1-31-2022	Lance Sperring	Copyright Update





This Information is Proprietary:

No part of this document shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from the publisher. Although every precaution has been taken in the preparation of this Repair Guide, the publisher and author assume no responsibility for errors or omissions, nor is any liability assumed for damages resulting from the use of the information contained herein. The information contained herein is subject to change without notice.

Warnings:

- Any repairs on a Power Breezer[®] should only be made by authorized personnel or Power Breezer personnel. Any repairs/modifications by others will void the unit's warranty.
- Power Breezer has made every effort to ensure that the directions provided in this Guide are complete and accurate. Any attempt on the reader's part to perform a do-it-yourself upgrade, or repair will be solely at the reader's risk. Even when this Guide's instructions are carefully followed, the slightest misstep could result in damage to the unit. If the reader is unsure about how to install the accessory as described in this Guide, please stop and contact Power Breezer customer service for assistance. 1-844-233-5673 | customerservice@powerbreezer.com



Materials Required:

- Hair Guard Kit:
 - a. Mesh
 - b. 36 Zip Ties

Tools Required:

- Clippers or Sturdy scissors
- Small Paperclip

Persons Required:

• 1-2



A. Make note of differing sides of the mesh. The flat side will be mounted toward the Unit's Rear Guard.






Flat Side

Rounded Side



- B. The Hair Guard mesh will be attached to the Unit's Rear Guard using the provided 36 zip ties. Spaced evenly, they will ensure the mesh will lay flat and secure.
 - 12 placed close to the center of the Rear Guard
 - 12 placed midway between the center and outer edge of the Rear Guard
 - 12 placed on the outer edge of the Rear Guard

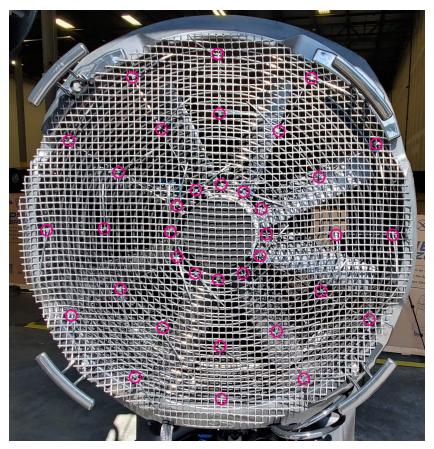



When working with the zip ties, a small paperclip or similar tool will be required to redirect/fish the end of the zip tie back out.

A. Bend a small paperclip to create a hooking tool.



B. With the head of the unit mounted on its pole, hold and position the mesh so that it is evenly distributed across the face of the Rear Guard.





- C. You will be attaching the Hair Guard starting from the center and working around in a circular pattern.
 - a. Holding the Mesh in place, (additional set of hands to help hold the Mesh at this point may be necessary) feed the zip tie with ribs inward, through the Mesh and past the Rear Guard.

NOTE: Feed the zip tie through the mesh in one "box" around the Rear Guard and out in an adjacent box. Do not zip tie more than two adjacent boxes or damage to the Mesh and or buckling may occur.

b. With your other hand, use the small end of the paperclip to hook the loose end of the zip tie on the other side of the Rear Guard.



c. Pull the paperclip out with the loose end, taking care not to hook the Rear Guard and or Mesh.






d. Once the zip tie's end is out, feed it into the locking end. Do not fully tighten. Leave loose until all remaining ties are done similarly.



- e. Continue this process on the center part. Move to the middle part and finally to the outer part.
- f. Fully tighten each zip tie.
- g. Using clippers, trim ends off each zip tie and discard.



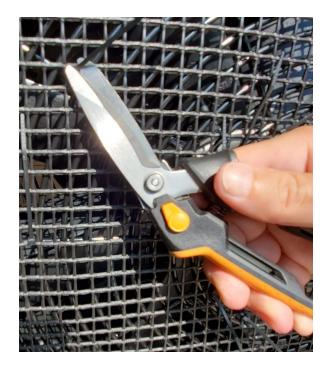

h. Using clippers, trim excess Mesh around the edge of Rear Guard and discard.









D. Installation complete.



If you have questions and or problems applying the procedures found in this guide, please contact Customer Service by email at <u>customerservice@powerbreezer.com</u> or by phone at 844-233-5673.